

# FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN

Threaded Brake Lever Guard **Part No. BLG-R1-2006-GBR** /  
Threaded Clutch Lever Guard **Part No. CLG-R1-2006-GBR**


## YAMAHA R1, R6 & R7 BRAKE LEVER GUARD – PART NO. BLG-R1-2006-GBR

STOCK ONLY

FITS MODELS 2006-2022

*Please note: Must use Thread Lock (not supplied) for correct operation.*

- 1 Remove existing bar end assembly.
  - 2 Assemble bolt through lever guard into spacer (shown in **Fig.1**) and then insert into handlebar end and tighten M6 Bolt to **15Nm - DO NOT OVERTIGHTEN.**
- Note: Please be aware that there will still be apparent movement in the lever protector due to the fact it is rubber mounted.*  
*Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.*

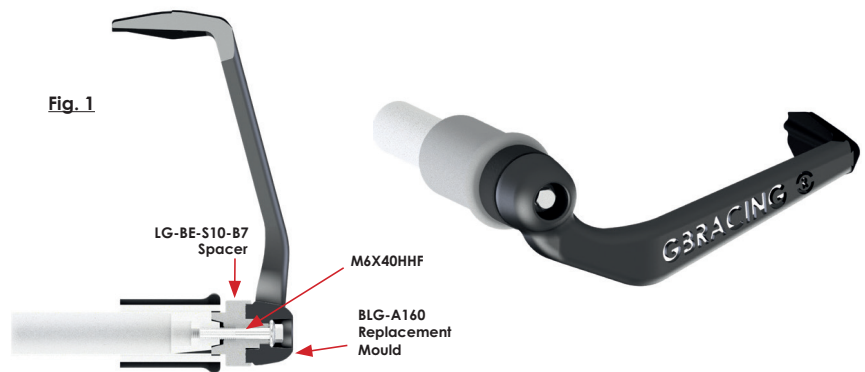

## YAMAHA R1, R6 & R7 CLUTCH LEVER GUARD – PART NO. CLG-R1-2006-GBR

STOCK ONLY

FITS MODELS 2006-2022

*Please note: Must use Thread Lock (not supplied) for correct operation.*

- 1 Remove existing bar end assembly.
  - 2 Assemble bolt through lever guard into spacer (shown in **Fig.1**) and then insert into handlebar end and tighten M6 Bolt to **15Nm - DO NOT OVERTIGHTEN.**
- Note: Please be aware that there will still be apparent movement in the lever protector due to the fact it is rubber mounted.*  
*Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.*



# FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN

## UNIVERSAL BRAKE LEVER GUARD, **A160 MOULDED REPLACEMENT PART ONLY** **PART NO. BLG-A160**

### This is to be used with the GBRacing bar end and insert

- 1 Remove full assembly from bars.
- 2 Remove bolt from assembly.
- 3 Replace lever protector.
- 4 Re-install bolt.
- 5 Re-fit the full assembly back into bar.
- 6 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 7 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.



*Please note: We recommend to use a medium thread lock (not supplied) for correct operation.*

## UNIVERSAL CLUTCH LEVER GUARD, **A160 MOULDED REPLACEMENT PART ONLY** **PART NO. CLG-A160**

### This is to be used with the GBRacing bar end and insert

- 1 Remove full assembly from bars.
- 2 Remove bolt from assembly.
- 3 Replace lever protector.
- 4 Re-install bolt.
- 5 Re-fit the full assembly back into bar.
- 6 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 7 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.



*Please note: We recommend to use a medium thread lock (not supplied) for correct operation.*