

THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-ZX-25R-2020-1-GBR /


Secondary Clutch Cover Part No. EC-ZX-25R-2020-2-GBR /

Secondary Pulse Cover Part No. EC-ZX-25R-2020-3-GBR /

Bullet Frame Sliders Part No. FS-ZX-25R-2020-LHS-S & FS-ZX-25R-2020-RHS-S



**SECONDARY ALTERNATOR COVER**  
**PART NO. EC-ZX-25R-2020-1-GBR**

1. Remove lower fairing panel.
2. Remove 4 existing bolts from the stock Alternator cover, shown as position Bolt 1, 2, 3 & 4.
3. Place the Secondary Alternator Cover over the stock cover.
4. Assemble 4 replacement bolts loosely in the correct position as shown.
5. Tighten bolts to a Torque of 11Nm as per manufacturer's recommendations. **DO NOT OVERTIGHTEN.**
6. Re-fit lower fairing panel.

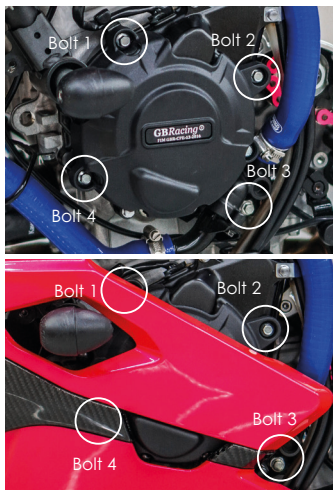

**SECONDARY CLUTCH COVER**  
**PART NO. EC-ZX-25R-2020-2-GBR**



1. Remove lower fairing panel.
2. Remove 4 existing bolts from the Clutch cover, shown as position Bolt 1, 2, 3 & 4.
3. Place the Secondary Clutch Cover over the stock cover.
4. Assemble 4 replacement bolts loosely in the correct position as shown.
5. Tighten bolts to a Torque of 11Nm as per manufacturer's recommendations. **DO NOT OVERTIGHTEN.**
6. Re-fit lower fairing panel.

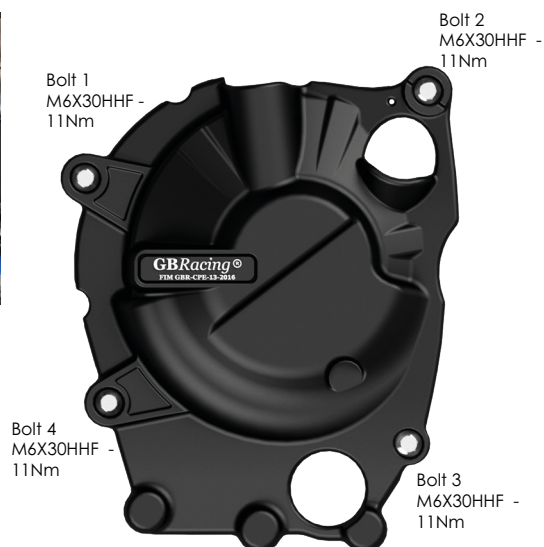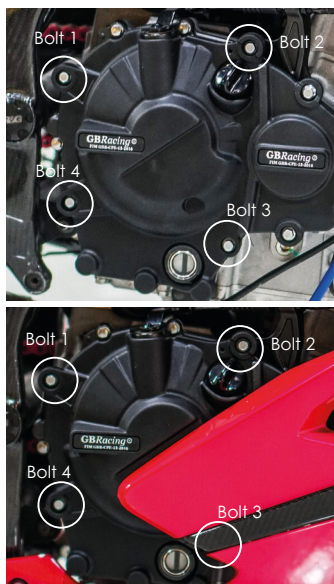

**SECONDARY PULSE COVER**  
**PART NO. EC-ZX-25R-2020-3-GBR**

1. Remove lower fairing panel.
2. Remove 3 existing bolts from the Pulse cover, shown as position Bolt 1, 2 & 3.
3. Place the Secondary Pulse Cover over the stock cover.
4. Assemble 3 replacement bolts loosely in the correct position as shown.
5. Tighten bolts to a Torque of 11Nm as per manufacturer's recommendations.
6. Re-fit lower fairing panel.

**DO NOT OVERTIGHTEN.**

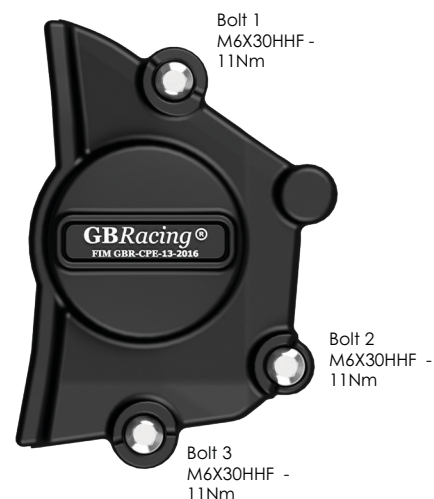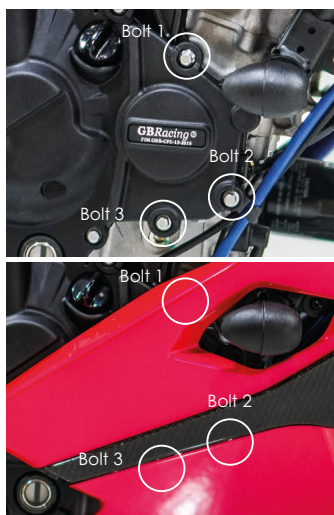

**BULLET FRAME SLIDER SET - PART NO. FS-ZX-25R-2020-S:**


**BULLET FRAME SLIDER - LEFT HAND SIDE - STREET**  
**PART NO. FS-ZX-25R-2020-LHS-S**

- 1 Remove upper engine mounting bolt, located through the fairing opening.
- 2 Assemble bolt through the aluminium bush into correct position.
- 3 Tighten to 40NM torque.
- 4 Slide bullet moulding onto aluminium bush.
- 5 Screw M6 bolt into front of bullet moulding hand tight.



**BULLET FRAME SLIDER - RIGHT HAND SIDE - STREET**  
**PART NO. FS-ZX-25R-2020-RHS-S**

- 1 Remove upper engine mounting bolt, located through the fairing opening.
- 2 Assemble bolt through the aluminium bush into correct position.
- 3 Tighten to 40NM torque.
- 4 Slide bullet moulding onto aluminium bush.
- 5 Screw M6 bolt into front of bullet moulding hand tight.

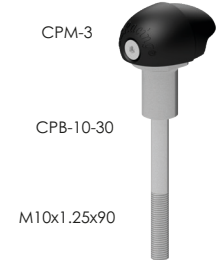

**ALSO FITS THIS MODEL**

<b>UNIVERSAL LOWER CHAIN GUARD ASSEMBLY</b>	CGA18-GBR-SET
<b>PADDOCK STAND / BOBBIN KIT</b>	BA12-8-GBR-SET
<b>REPLACEMENT MOULDED BULLET SLIDER</b>	CPM-3
<b>GOPRO CAMERA MOUNT</b>	CPM-3-GP
<b>BRAKE LEVER GUARD,</b> <i>A160 MOULDED REPLACEMENT PART ONLY</i>	BLG-A160
<b>CLUTCH LEVER GUARD,</b> <i>A160 MOULDED REPLACEMENT PART ONLY</i>	CLG-A160
<b>BRAKE LEVER GUARD</b>	BLG-M8-S5-B5-R6-A160-GBR
<b>CLUTCH LEVER GUARD</b>	CLG-M8-S5-B5-R6-A160-GBR
<b>XL BULLET SLIDERS</b>	FS-ZX-25R-2020-XL