



**Streetfighter
V4 SP2 2023**

FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN




THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-V4S-SF-2020-1-GBR / Secondary Clutch Cover Part No. EC-V4R-2019-2-GBR


SECONDARY ALTERNATOR COVER PART NO. EC-V4S-SF-2020-1-GBR

- 1 Remove the 4 standard bolts as shown as bolt position 1, 2, 3 & 4.
- 2 Place the secondary alternator cover against the standard alternator.
- 3 Insert the 4 supplied bolts and tighten to a maximum of 8Nm.

DO NOT OVERTIGHTEN

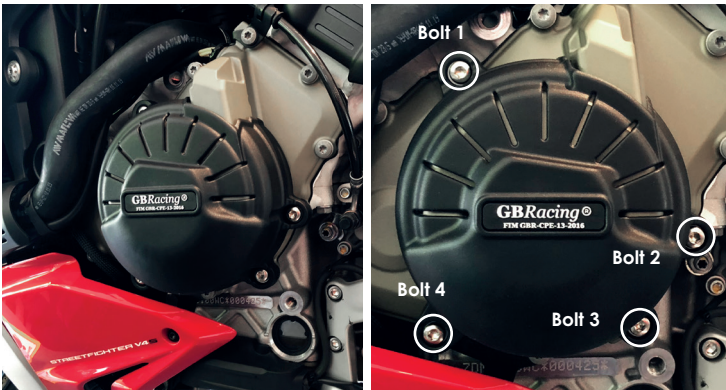

Bolt 1
M6X30A2-TORX - 8Nm

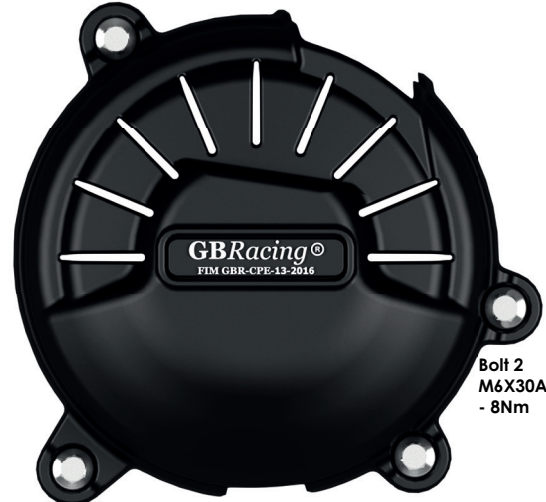

Bolt 2
M6X30A2-TORX
- 8Nm

Bolt 4
M6X35A2-TORX - 8Nm

Bolt 3
M6X30A2-TORX - 8Nm



Streetfighter
V4 SP2 2023

FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN



SECONDARY CLUTCH COVER PART NO. EC-V4R-2019-2-GBR

- 1 Remove fairing.
- 2 Remove 4 existing bolts at bolt position 1, 2, 3 & 4 from the standard OE clutch cover and then **RETAIN** them to refit the **GBRacing** cover (See Fig. 3).
- 3 Remove standard OE cover (see Fig. 4)
- 4 Place the **GBRacing** secondary clutch cover over the dry clutch (see Fig.5).
- 5 Assemble 4 original bolts loosely in the correct position as shown in Fig. 5.
- 6 Tighten bolts to a maximum Torque of 8Nm as per manufacturer's recommendations: **3-3.5Nm + 90° (equivalent 5.5-10Nm) DO NOT OVERTIGHTEN.**
- 7 Replace fairing.



FIG 2. Standard OE cover from factory

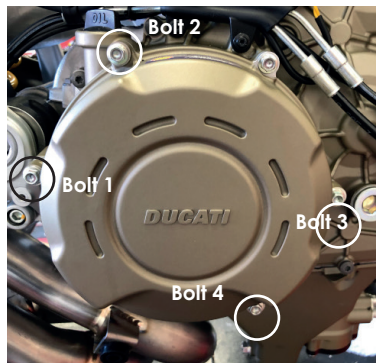


FIG 3. Standard OE cover from factory once fairing is removed. Remove 4 bolts and retain bolts.

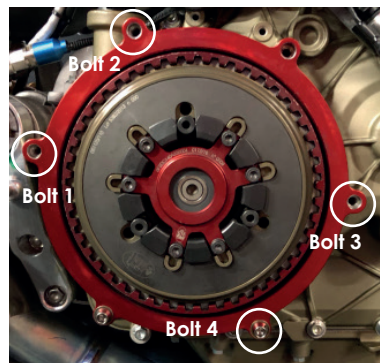


FIG 4. Dry clutch without OE cover

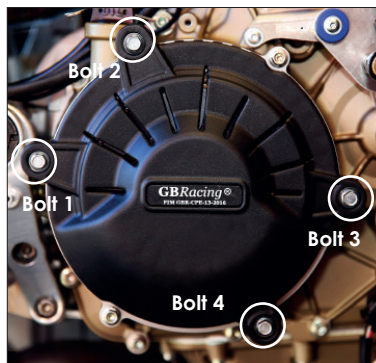


FIG 5. **GBRacing** cover fitted directly over the dry clutch - REUSE OE BOLTS



FIG 6. Keep original OE cover safe. This is not required while running **GBRacing** V4R 2019 clutch cover.

*The OE clutch cover will have to be removed to fit the V4R **GBRacing** clutch cover. IF however, you do NOT wish to remove this cover then you will need to fit the V4S 2018 **GBRacing** cover.*

FIG 1.
ALL 4 BOLTS SHOWN HERE ARE THE ORIGINAL BOLTS

