



**F900R, XR, GS, GSA 2020+  
F800 GS 2024  
F850 GS 2019-2023  
F750 GS 2019-2023**

# FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN





**THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:**

Secondary Alternator Cover Part No. EC-F900R-2020-1-GBR / Secondary Clutch Cover Part No. EC-F900R-2020-2-GBR /  
Secondary Water Pump Cover Part No. EC-F900R-2020-5-GBR /

### SECONDARY ALTERNATOR COVER – PART NO. EC-F900R-2020-1-GBR

- 1 Remove 4 existing bolts from the stock alternator cover, shown as position Bolt 1, 2, 3 & 4.
  - 2 Place the secondary alternator cover over the stock cover.
  - 3 Assemble 4 replacement M7X45-TORX bolts loosely in the correct position as shown.
  - 4 Tighten bolts to a torque of 20Nm. **DO NOT OVERTIGHTEN.**
- NOTE:** When fitting to model with engine bars (GS Adventure) the alternator side bars will need to be removed for fitting, then they can be re fitted.

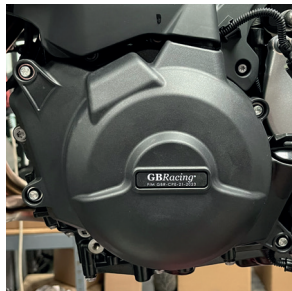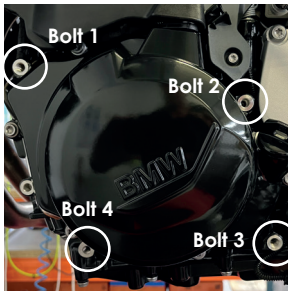


**Bolt 1**  
SPB-20  
M7x45-TORX  
- 20Nm

**Bolt 2**  
SPB-20  
M7x45-TORX  
- 20Nm


**Bolt 4**  
SPB-20  
M7x45-TORX  
- 20Nm

**Bolt 3**  
SPB-20  
M7x45-TORX  
- 20Nm

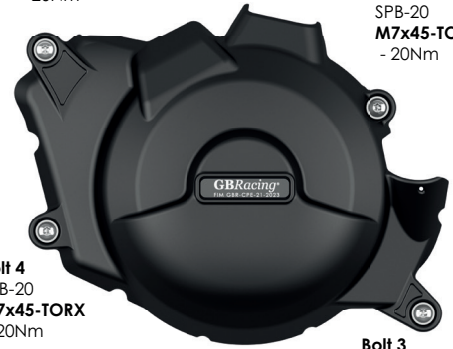

### SECONDARY CLUTCH COVER – PART NO. EC-F900R-2020-2-GBR

- 1 Remove 4 existing bolts from the stock clutch cover, shown as position Bolt 1, 2, 3 & 4.
- NOTE:** Bolt 2 has a rubberised washer and must be reused between the OE casing and GBRacing cover.
- 2 Place the secondary clutch cover over the stock cover.
- 3 Assemble 4 replacement M7X50-TORX bolts loosely in the correct position as shown.
- 4 Tighten bolts to a torque of 20Nm. **DO NOT OVERTIGHTEN.**

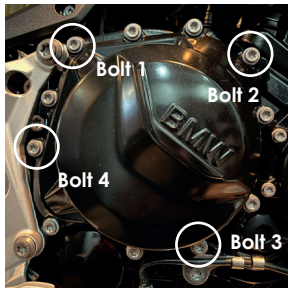

**Bolt 1**  
SPB-20  
M7x50-TORX  
- 20Nm

**Bolt 2**  
SPB-20  
M7x50-TORX  
- 20Nm


**Bolt 4**  
SPB-20  
M7x50-TORX  
- 20Nm

**Bolt 3**  
SPB-20  
M7x50-TORX  
- 20Nm



### SECONDARY WATER PUMP COVER – PART NO. EC-F900R-2020-5-GBR

- 1 Remove 4 existing bolts from the stock water pump cover, shown as position Bolt 1, 2, 3 & 4.
- 2 Place the secondary water pump cover over the stock cover.
- 3 Assemble 4 replacement stainless steel M6X40A2-TORX bolts loosely in the correct position as shown.
- 4 Tighten bolts to a torque of 12Nm. **DO NOT OVERTIGHTEN.**

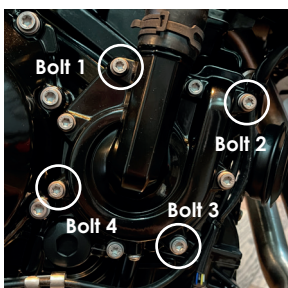


**Bolt 1**  
SPB-3  
M6x40A2-TORX  
- 12Nm

**Bolt 2**  
SPB-3  
M6x40A2-TORX  
- 12Nm

**Bolt 4**  
SPB-3  
M6x40A2-TORX  
- 12Nm

**Bolt 3**  
SPB-3  
M6x40A2-TORX  
- 12Nm

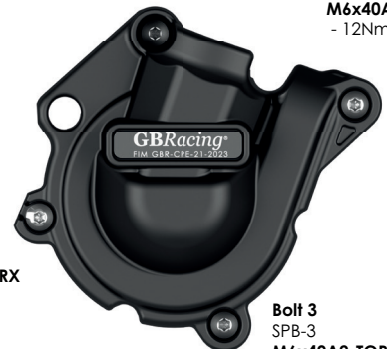

**ENGINE COVER SET: EC-F900R-2020-SET-GBR:**

EC-F900R-2020-1-GBR, EC-F900R-2020-2-GBR, EC-F900R-2020-5-GBR

**DO NOT** use these products unless you agree to our Terms & Conditions, as shown on our paperwork and website.  
If you do not agree, please return the product(s) to your dealer for a refund.