

Z1000 2011-20 • Z1000/SX 2011-19 • Ninja 1000SX 2020-23 • Versys 1000 2012-24

THIS SHEET INCLUDES FITTING INSTRUCTIONS FOR THE FOLLOWING PARTS:

Secondary Alternator Cover Part No. EC-Z1000SX-2016-1-GBR / Secondary Clutch Cover Part No. EC-Z1000SX-2016-2-GBR /



Secondary Pulse Cover Part No. EC-Z1000SX-2016-3-GBR

Paddock Stand Bobbin Set Part No. BA12-10-GBR-SET / Part No. BA12-8-GBR-SET


SECONDARY ALTERNATOR COVER PART NO. EC-Z1000SX-2016-1-GBR

1. Remove fairing (if fitted).
2. Remove 4 existing bolts from the stock Alternator cover, shown as position Bolt 1, 2, 3 & 4.
3. Place the Secondary Alternator Cover over the stock cover. Please Note: Do not remove fairing bracket as GBRacing Secondary Cover will fit over it.
4. Assemble 4 replacement bolts loosely in the correct positions as shown.
5. Tighten bolts to a Torque of 11Nm as per Manufacturer's recommendations. **DO NOT OVERTIGHTEN.**
6. Replace fairing.

NOTE: for Versys 1000:
Small modification required to the belly pan: Square off this section highlighted below in Fig 1.

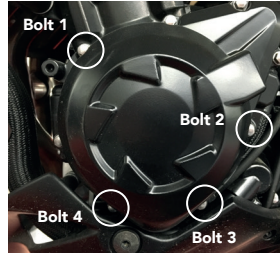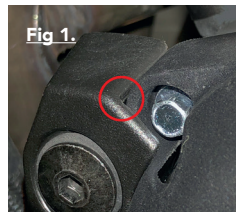

Bolt 1
M6X40HHF -
11Nm

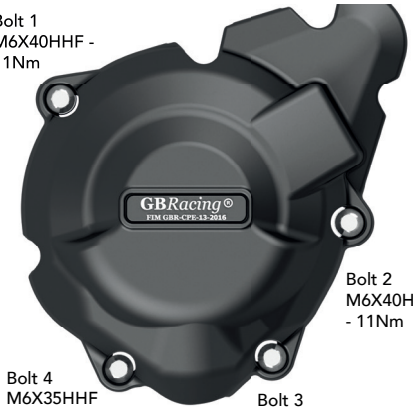


Bolt 2
M6X40HHF -
11Nm

Bolt 4
M6X35HHF -
11Nm


Bolt 3
M6X40HHF - 11Nm

SECONDARY CLUTCH COVER PART NO. EC-Z1000SX-2016-2-GBR

1. Remove fairing (if fitted).
2. Remove 4 existing bolts from the Clutch cover, shown as position Bolt 1, 2, 3 & 4.
3. Place the Secondary Clutch Cover over the stock cover.
4. Assemble 4 replacement bolts loosely in the correct position as shown.
5. Tighten bolts to a Torque of 11Nm as per Manufacturer's recommendations. **DO NOT OVERTIGHTEN.**
6. Replace fairing.

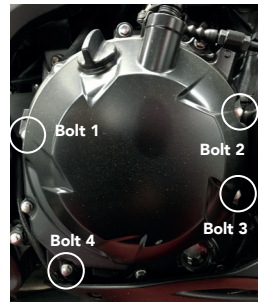

Bolt 1
M6X45HHF -
11Nm

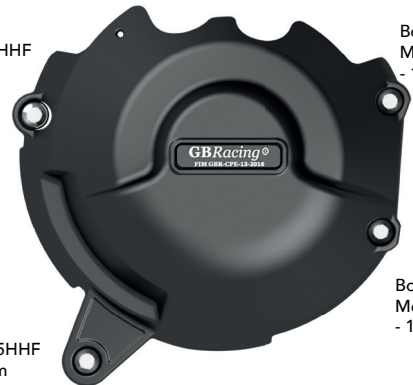


Bolt 2
M6X35HHF -
11Nm

Bolt 4
M6X35HHF -
11Nm

Bolt 3
M6X35HHF -
11Nm

SECONDARY PULSE COVER PART NO. EC-Z1000SX-2016-3-GBR

1. Remove fairing (if fitted).
2. Remove 4 existing bolts from the Pulse cover, shown as position Bolt 1, 2, 3 & 4.
3. Place the Secondary Pulse Cover over the stock cover. Assemble 4 replacement bolts loosely in the correct position as shown.
4. Tighten bolts to a Torque of 11Nm as per Manufacturer's recommendations. **DO NOT OVERTIGHTEN.**
5. Replace fairing.

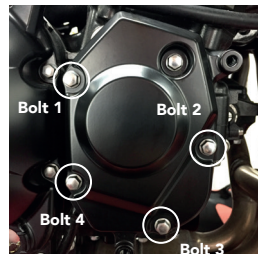

Bolt 1
M6X35 -
11Nm




Bolt 2
M6X35 -
11Nm

Bolt 4
M6X35 -
11Nm

Bolt 3
M6X35 - 11Nm

PADDOCK STAND / BOBBIN SET - PART NO. BA12-10-GBR-SET

- 1 Assemble the M10 Stainless Steel bolt through the moulded bobbin and the Black Anodised Bush.
- 2 Tighten bolts to the swing arm boss, 8 N/m.

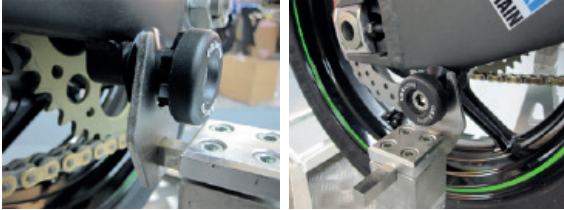

M10 x 1.25P x 40mm - 8 Nm



1 x Moulded Paddock
Stand / Bobbin

PADDOCK STAND / BOBBIN SET - PART NO. BA12-8-GBR-SET

- 1 Assemble M8 x 40mm Bolt through the moulded bobbin.
- 2 Tighten bolts to swing arm boss, 8 Nm.
DO NOT OVERTIGHTEN



1 x M8 x 40 Bolt



1 x Moulded Paddock
Stand / Bobbin